



DISPLAY & CONTROL PANEL



i14 Manual

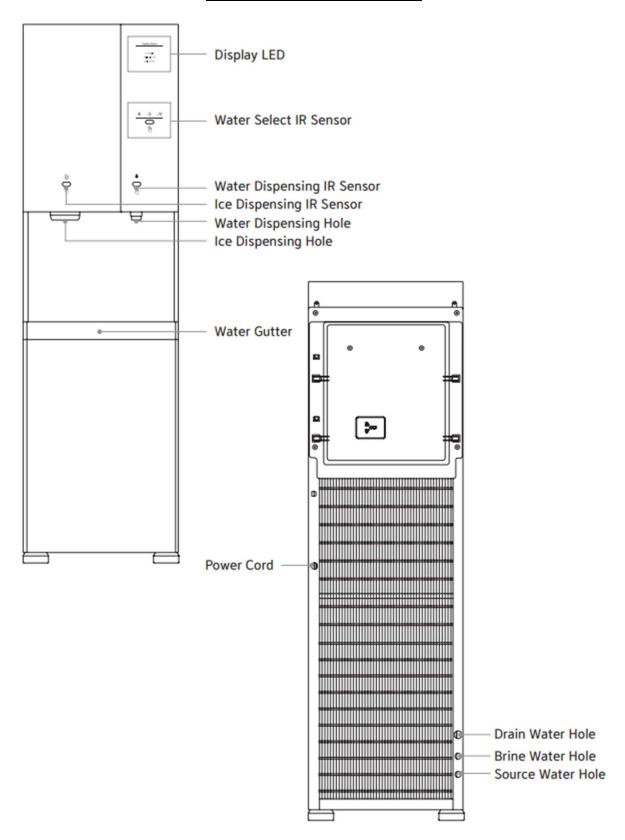



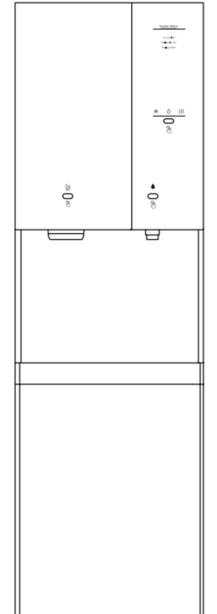

Filtration Active	Always On	
UV Enabled	Always On	
Refilling Ice Bin	Lights up during the ice-making process. (LED: White)	
Refilling Water	Light up during the water filtering process. (LED: White)	

IR Sensor & LED

<u>* </u>	Put your hand close to the Water Select IR sensor to select Cold/ Ambient/ Hot water respectively. Selected LED lights up. (**Cold: Blue, *\int Ambient: White, \;\;\;\}\;\ Hot: Red)	
\$ 0 ®	Put your hand close to the Ice IR sensor to dispense ice.	
• 0 @	 Put your hand close to the Water Dispensing IR sensor to dispense selected water. (Cold: Blue, Ambient: White, Hot: Red)	

i14 Manual Page 12 - Revision: 08-09-2024



OPERATING INSTRUCTIONS

The below pictures show the front user interface (UI) and control panel for the *i14 Ice and Water Dispenser*, as well as the Beep Operation Signal table.

Operation beep sound

* A beep sound following operation of the product.

	Division	BEEP	Remarks/occurrence
1	Power ON	Ding dong dang~	once
2	Key input	Ding~	once
3	Water Dispensing Start	Ding~	once
4	Water Dispensing Ending	Ding~	once
5	Overflow	Ding~ding~ding~ding~	One second interval
6	Ice dispensing	Ding~ding~ding~ding~	once

To Select Water:

Place your hand close to the WATER SELECT IR SENSOR. Move your hand away and back to the sensor to select the next option. **Cold**Water → Ambient Water → Hot Water is the selection order.


- *Your hand should be 3-4cm away from the sensor to activate.
- *Move your hand back and forth to cycle.


To Dispense Water:

Place your hand close to the DISPENSE IR SENSOR (Right Sensor) and hold there to dispense. Remove your hand to stop. *If both sensors (SELECT & DISPENSE detect any motions simultaneously, then the unit will recognize this as an error and will not operate.



Place your hand close to the ICE DISPENSE IR SENSOR (Left Sensor). Hold your hand in place to dispense ice, remove to your hand to stop.

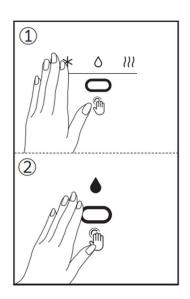

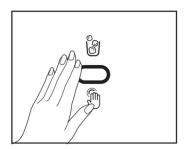

^{*}If the sensor does not detect motion for more than 5 seconds, it will switch to the default mode (Cold Water).