



DISPLAY & CONTROL PANEL

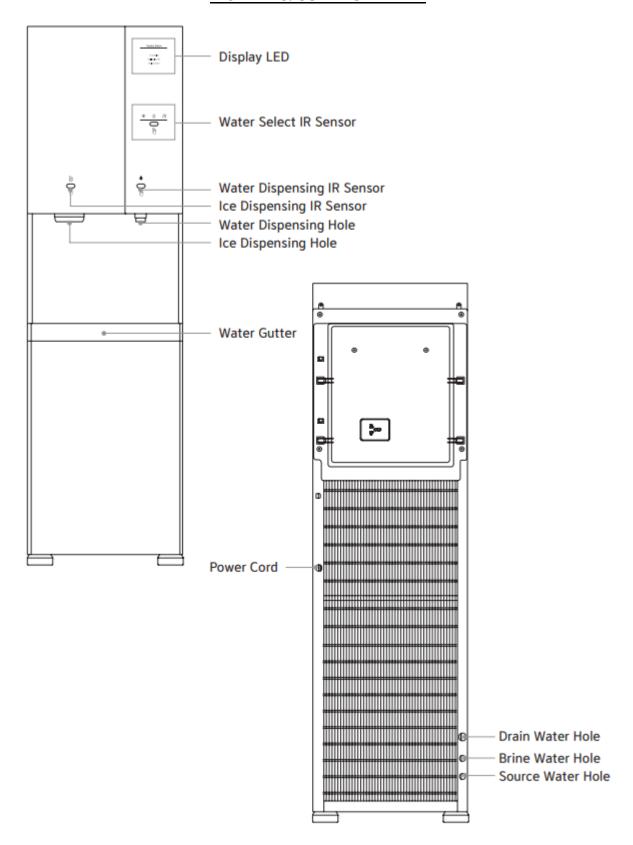

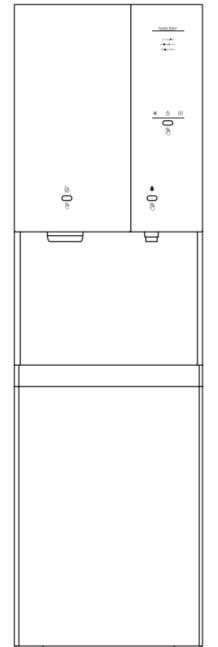

Display LED



Filtration Active	Always On	
UV Enabled	/ Enabled Always On	
Refilling Ice Bin	Lights up during the ice-making process, (LED: White)	
Refilling Water	Light up during the water filtering process. (LED: White)	

IR Sensor & LED

* ° ≈	Put your hand close to the Water Select IR sensor to select Cold/ Ambient/ Hot water respectively. Selected LED lights up. (**Cold: Blue, *\infty\$ Ambient: White, \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
\delta \big	Put your hand close to the Ice IR sensor to dispense ice.
• ()	 Put your hand close to the Water Dispensing IR sensor to dispense selected water. (Cold: Blue, Ambient: White, Hot: Red)

i14 Manual Page 12 - Revision: 08-09-2024



OPERATING INSTRUCTIONS

The below pictures show the front user interface (UI) and control panel for the *i14 Ice and Water Dispenser*, as well as the Beep Operation Signal table.

Operation beep sound

* A beep sound following operation of the product.

	Division	BEEP	Remarks/occurrence
1	Power ON	Ding dong dang~	once
2	Key input	Ding~	once
3	Water Dispensing Start	Ding~	once
4	Water Dispensing Ending	Ding~	once
5	Overflow	Ding~ding~ding~ding~	One second interval
6	Ice dispensing	Ding~ding~ding~ding~	once

To Select Water:

Place your hand close to the WATER SELECT IR SENSOR. Move your hand away and back to the sensor to select the next option. **Cold Water > Ambient Water > Hot Water** is the selection order.


- *Your hand should be 3-4cm away from the sensor to activate.
- *Move your hand back and forth to cycle.


To Dispense Water:

Place your hand close to the DISPENSE IR SENSOR (Right Sensor) and hold there to dispense. Remove your hand to stop. *If both sensors (SELECT & DISPENSE detect any motions simultaneously, then the unit will recognize this as an error and will not operate.

To Dispense Ice:

Place your hand close to the ICE DISPENSE IR SENSOR (Left Sensor). Hold your hand in place to dispense ice, remove to your hand to stop.

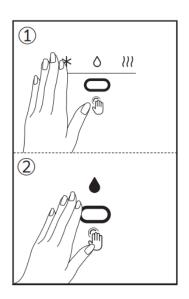

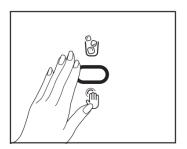

^{*}If the sensor does not detect motion for more than 5 seconds, it will switch to the default mode (Cold Water).