


## OPERATING INSTRUCTIONS

The below pictures show the front user interface (UI) and ADA control panel for the *XL1 Water Dispenser*.

### To Select Temperature:

On the main screen, touch one of the three temperature selections to designate the temperature of water dispensed. Cold, Ambient, and Hot are the selections, from left to right.


\*Unit will default to the cold-water selection.

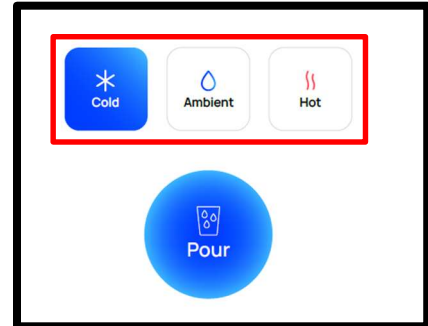

### To Dispense Water:

On the main screen, and with the desired temperature selected, touch and hold the large blue Pour button to begin pouring. Release to cease dispensing.

\*If the Pour button is not pressed within three seconds of selecting water other than Cold, unit will default back to the cold-water selection.

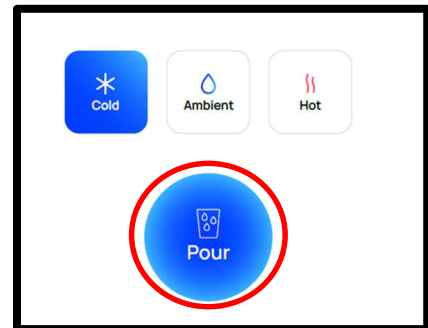

### Using the ADA Controls:

Alternatively, the ADA controls to the right of the drip tray can also be used to select and dispense water. Use the top three buttons to select the desired temperature, and the Pour button to dispense water.

